



# **NACVIEW**

## **INSTALLATION GUIDE**

## Content

Introduction.....	2
CLI Installer .....	2
WWW Installer .....	3
License.....	5
System Settings .....	6
Summary .....	6

## Introduction

The NACVIEW Installation Guide is a document that outlines the steps user must follow to properly install the NACVIEW system.

The system is available in two versions:

- as software for a virtual machine,
- as a physical machine with the installed software.

The software installation consists in the successive activation of two installers. The first one is the CLI installer, which defines the basic parameters of the system.

Then, the WWW installer is launched, where the user configures more advanced parameters. Both processes are described in this document.

---

## CLI Installer

After logging in to the server console, the CLI installer login window will appear. Log in using the details below.

Default system login details:

login: admin

password: NACVIEW



To increase system security, it is recommended to change the default password.

The installer main menu should appear on the screen. Select the Settings option by typing the appropriate number from the menu:

```
MACVIEW UM appliance 2.3.2

1. Settings
2. Change admin password
3. Maintenance
4. Directory Services (e.g. LDAP, AD)

0. Exit

Choice [ 1 - 4, 0 ] _
```

Complete the displayed form, specifying the parameters:


- Hostname - server name,
- IP address - server IP address,
- Prefix Netmask - subnet mask (in bits),
- Nameserver - DNS server (if you add several DNS servers, separate them with a space),
- Values for search - search domains,
- NTP - NTP server (when adding several NTP servers, separate with a space).

After confirming the set parameters with the **Enter** button, a summary will appear on the screen. If all the data is correct, type "y" and press **Enter** again. Exit the installer by selecting the digit from the main menu that corresponds to the **Exit** option.


## WWW Installer

After completing the installation process using the CLI Installer, log in to the web installer to finish the system installation. To do this, use the IP address defined in the CLI configurator, login and password for the administrator account.


Enter "https: //" in the browser window and the IP address defined in the CLI installer (e.g. <https://10.10.10.1>). The login for the default administrative account is [admin@nacview.com](mailto:admin@nacview.com). The default password is NACVIEW.

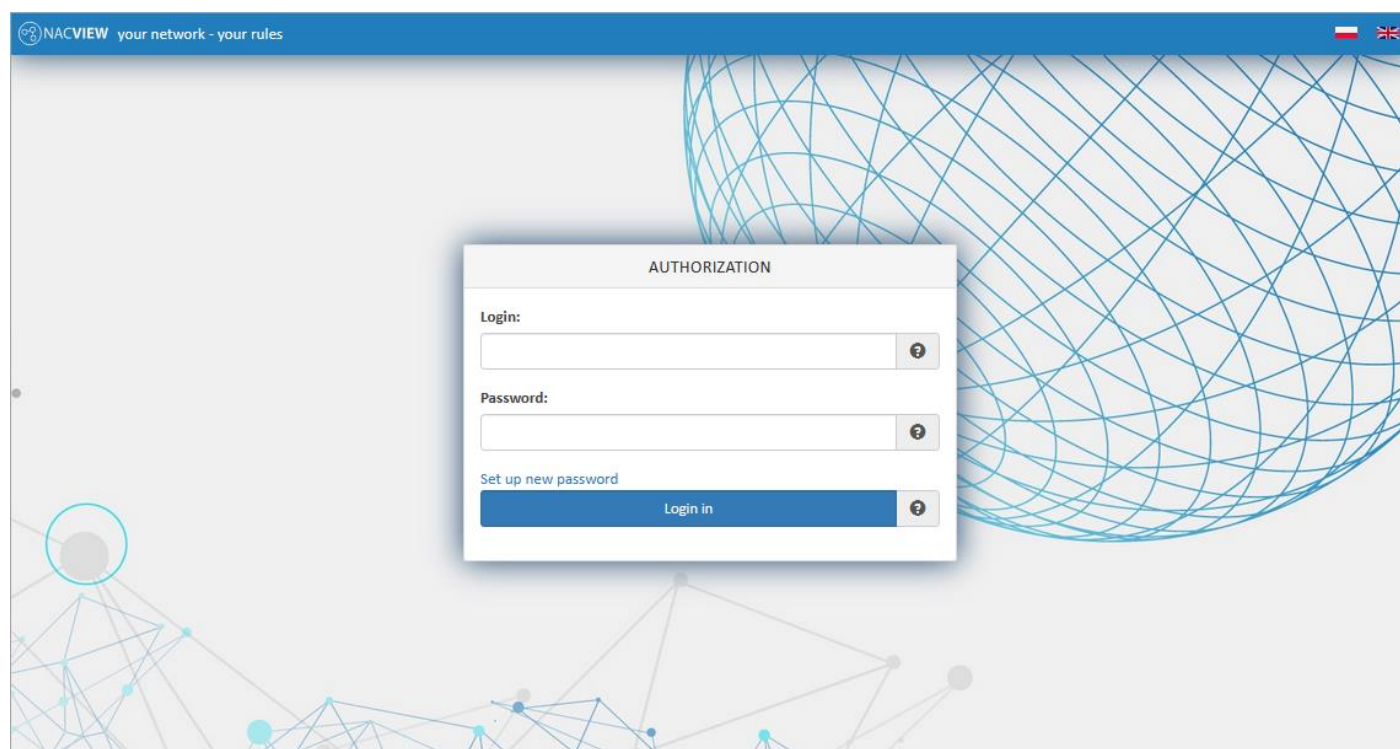

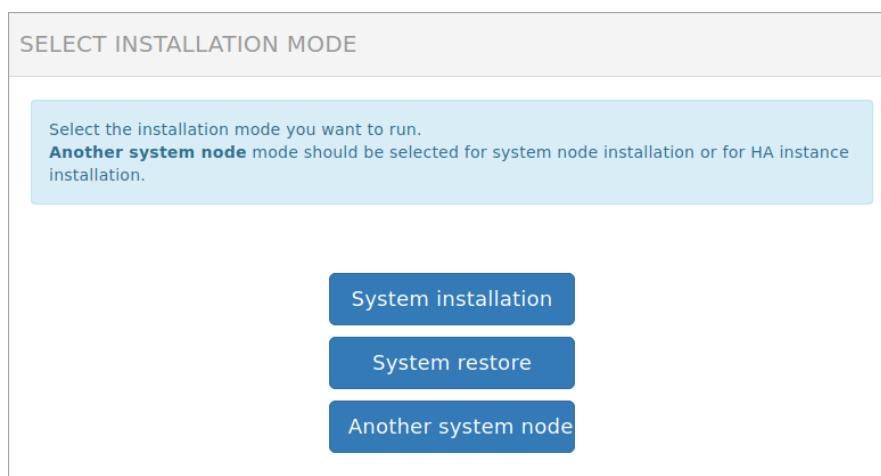

After logging in, the installation mode selection window will appear. To go to the WWW Installer, click the **System Installation** button.

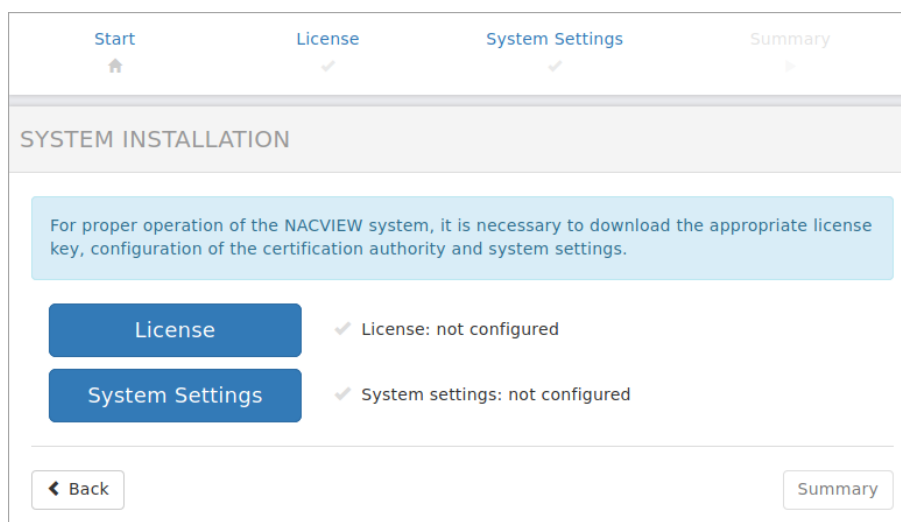

In the displayed window there are two buttons that correspond to the stages of the installation process: **License** and **System Settings**.



-  Each of the configuration steps can be started at any time during the installation process. You can also return to each of them at any time and change the information entered.
-  After completing both steps you will be able to go to the summary page and install the entered parameters.

## License

Click the **License** button and then the **License request**. Fill in all the fields of the displayed form and click **Confirm**.

Start

License

System Settings

Summary

Start

License

System Settings

Summary

Start

License

System Settings

Summary

LICENSE REQUEST

In the NACVIEW system, the license is generated by the Vendor based on the information provided by the Customer in the License request form. The data file should be downloaded and send to the e-mail address: **request@nacview.com**. The next step is to upload the received license file.

Customer\*

VATIN\*

Country name\*

State\*

City\*

Postal code\*

Address\*

E-mail\*

Phone number\*

Contact person\*

Contact person E-mail\*


Contact person phone number\*

Back

Confirm

Download the completed form, then send it to [request@nacview.com](mailto:request@nacview.com). Based on the data provided in the form, an appropriate license will be generated and sent to the e-mail address from which the form was sent.


The received license file should be uploaded to the system. To do this, click **License installation** and select the appropriate file from the disk.

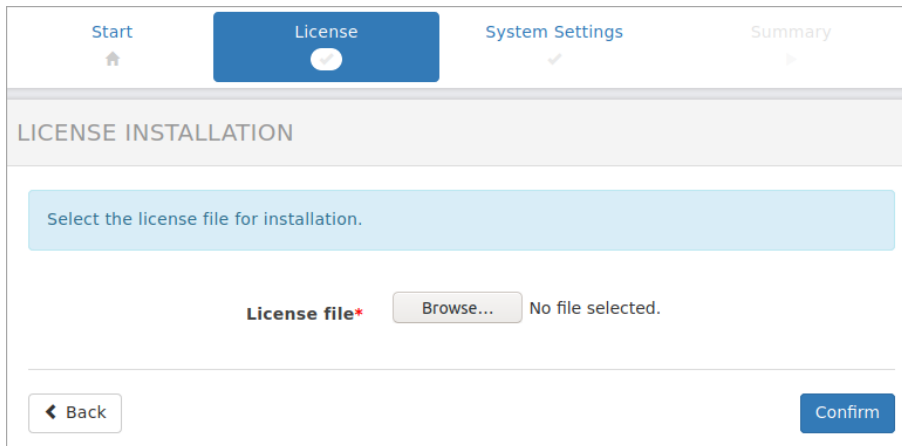

Click the **Confirm** button. After the license key has been installed correctly, the status: *configured* should appear next to the **License installation** button. Return to the **System Installation** window.

## System Settings

The next stage of configuration is System Settings. Now you can define what the default language of the NACVIEW system will be, as well as select the time zone in which the system will operate.

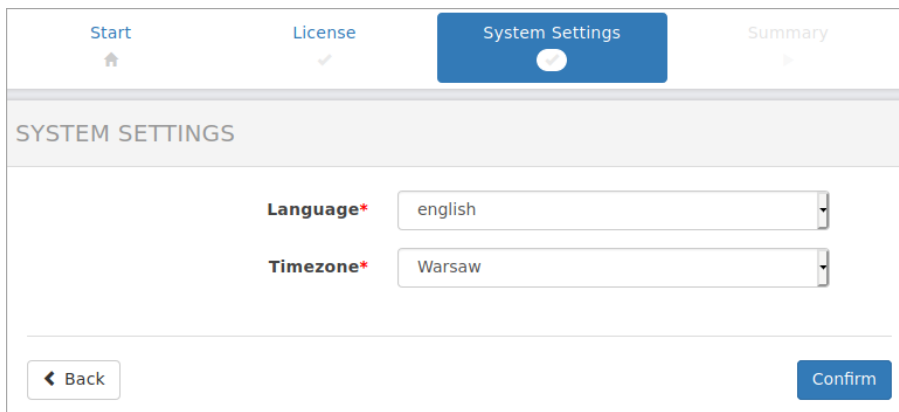

After selecting the appropriate parameters, click the **Confirm** button and return to the **System Installation** window.

## Summary

After completing all the configuration steps, the **Summary** button will be unlocked in the **System Installation** window. Click it.

The **Summary** window will display the information that has been configured in each step. If all the data is correct, click the **Install** button.

[Start](#)
[License](#)
[System Settings](#)
[Summary](#)

SYSTEM INSTALLATION - SUMMARY






### License

Customer
E-mail
Limit
500
Creation date
2020-03-09

### System Settings

Language
en
Timezone
Europe/Warsaw

Installation of the system is unambiguous with confirmation of reading and understanding the license terms and expressing consent. The full text of the license terms is available in the following documents:

Attachment	Size
 <a href="#">NACVIEW License agreement EULA EN</a>	144.68 KB
 <a href="#">NACVIEW Umowa licencyjna EULA PL</a>	199.56 KB
 <a href="#">NACVIEW Software licensing method</a>	60.02 KB
 <a href="#">Support services for NACVIEW software</a>	251.11 KB
 <a href="#">NACVIEW Privacy policy</a>	117.76 KB

Back

Install



Wait for the installation to complete, bearing in mind that the machine should not be turned off during installation.